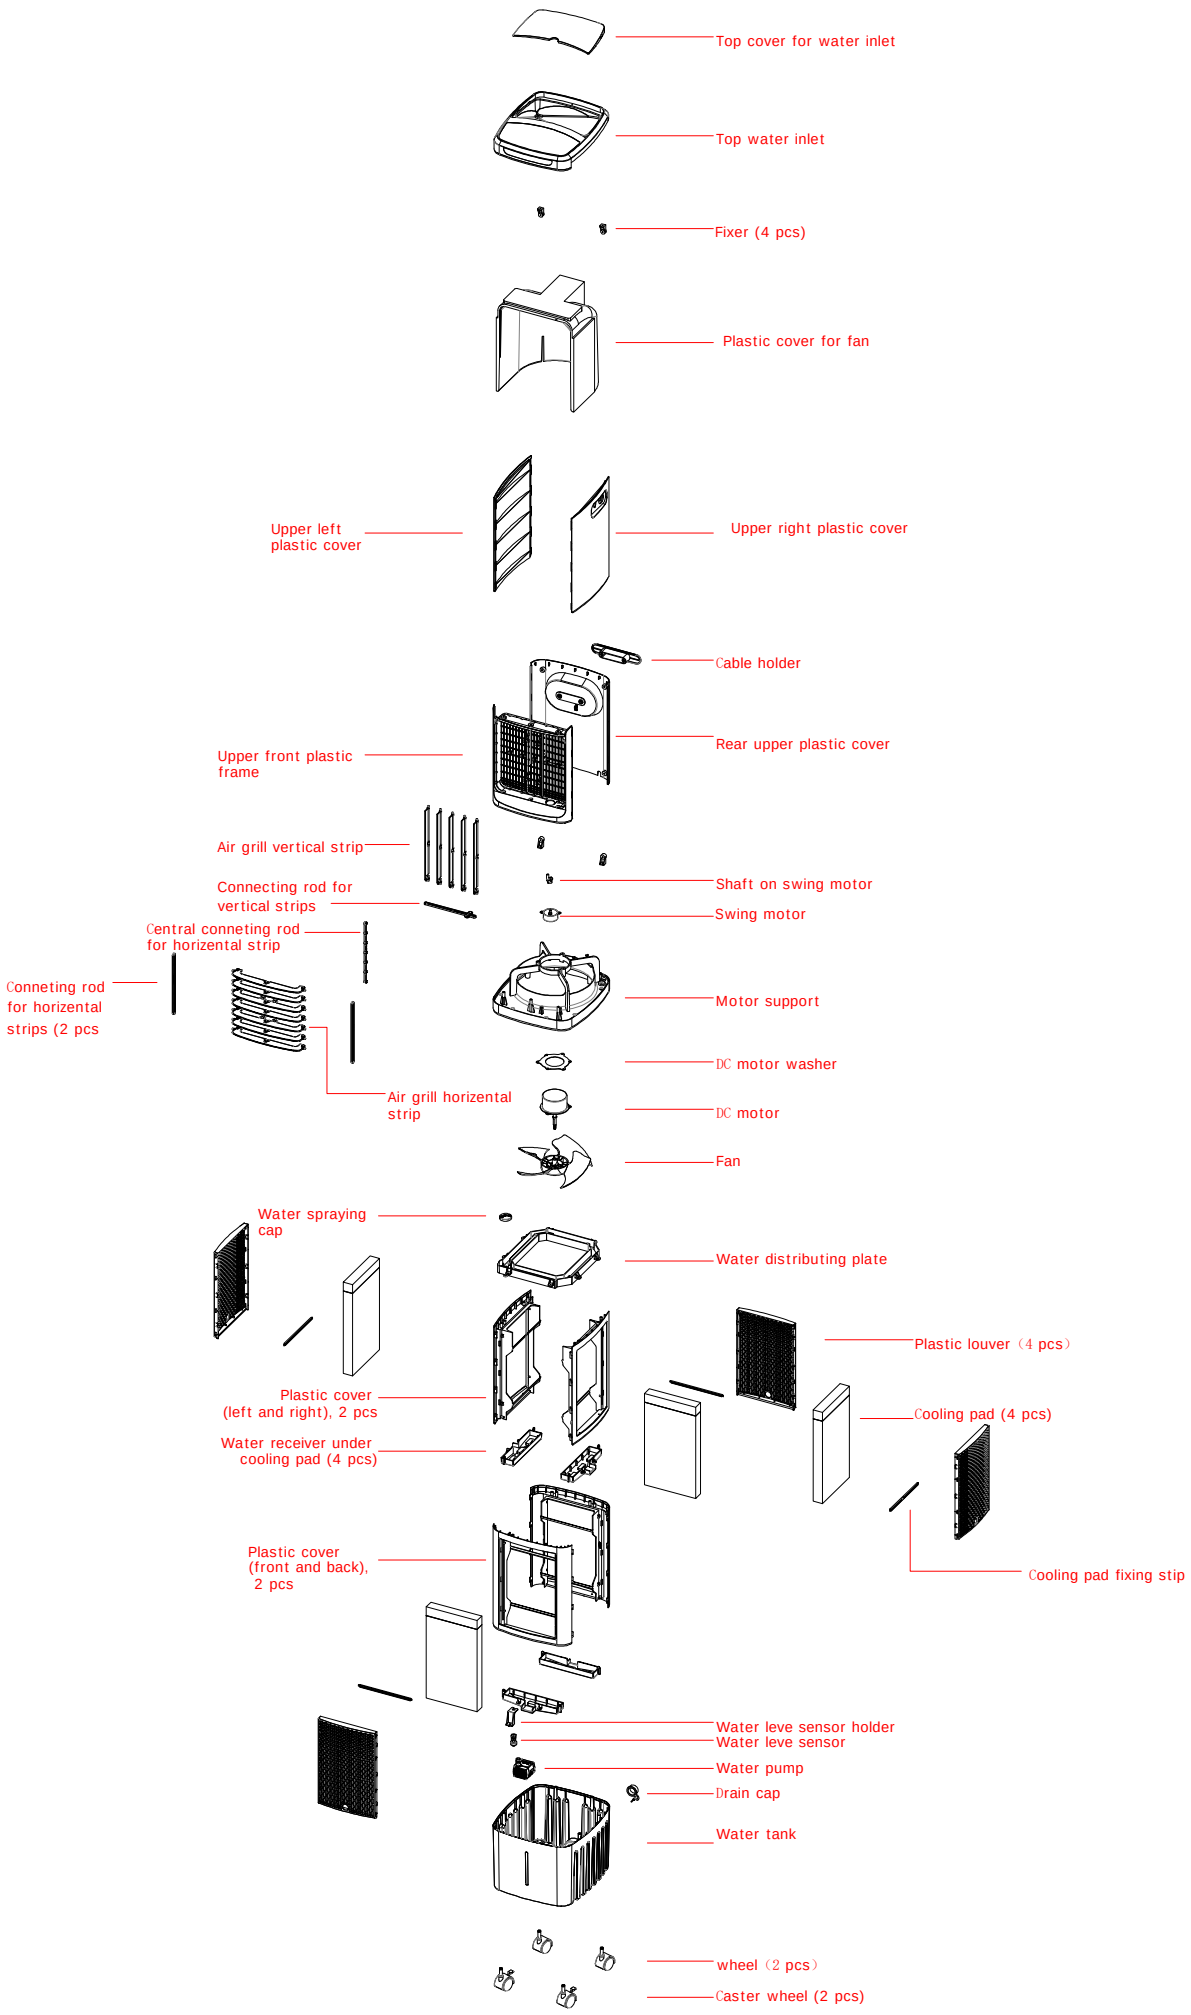

Re: Electric board is not shown in the explode view